


a xylem brand



Operating Manual

IQ SENSOR NET MIQ/PS

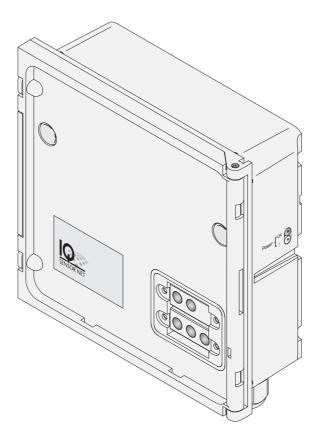

IQ SENSOR NET wide-range power supply module Mains voltage 100 ... 240 VAC



Note

For the most recent version of the manual, please visit <u>www.ysi.com</u>.

Contact YSI 1725 Brannum Lane Yellow Springs, OH 45387 USA Tel: +1 937-767-7241 800-765-4974 Email: <u>environmental@ysi.com</u> Internet: <u>www.ysi.com</u>

Copyright © 2012 Xylem Inc.

MIQ/PS - List of contents

1	Overview			
	1.1	How to use this component operating manual1-		
	1.2	Features of the MIQ/PS1-2		
2	Safe	ety instructions 2-1		
	2.1	Authorized use		
	2.2	General safety instructions 2-2		
3	Inst	allation		
	3.1	Scope of delivery		
	3.2	Installation in the IQ SENSOR NET		
	3.3	Electrical connections: General instructions		
	3.4	Connecting the power supply		
4	Mai	ntenance and cleaning 4-1		
	4.1	Maintenance		
	4.2	Cleaning		
5	Тес	hnical data5-1		
6	Cor	ntact Information 6-		
	6.1	Ordering & Technical Support6-		
	6.2	Service Information		
6	6.1	Ordering & Technical Support6		

1 Overview

1.1 How to use this component operating manual

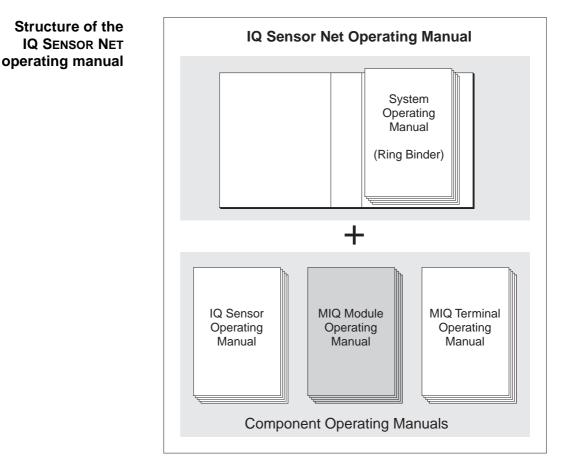


Fig. 1-1 Structure of the IQ SENSOR NET operating manual.

The IQ SENSOR NET operating manual has a modular structure like the IQ SENSOR NET system itself. It consists of a system operating manual and the operating manuals of all the components used.

Please file these component operating manuals into the ring binder of the system operating manual.

	1.2	Features of the MIQ/PS
General characteristics	with it	IIQ/PS wide-range power supply supplies the IQ SENSOR NET s operational voltage. The operational voltage is forwarded to the imers in the following ways:
		he case of stacked mounting, via the IQ SENSOR NET contacts on front and rear of the module
	● In t cat	the case of distributed mounting, via the IQ SENSOR NET SNCIQ ble
	● In t	the case of sensors, via the SACIQ sensor connecting cable.
	chara and w lation	he standard MIQ module housing, the MIQ/PS has the same cteristics as all MIQ modules regarding stability, leakproofness eather resistance. It also provides the same wide variety of instal- options (stacked mounting, canopy mounting, tophat rail ting, etc.).
	consu overa deterr	umber of MIQ/PS that are required depends on the number of imers in the system and their power requirement as well as on the II loss of power in the IQ SENSOR NET cables. Instructions for mining the correct number of power modules are given in the LLATION chapter of the system operating manual.
Terminal strip		IIQ/PS has the following electrical connections on the terminal nside the housing:
	• 1 x	mains connection, two-pole

• 3 x SENSORNET connection.

2 Safety instructions

This component operating manual contains special instructions that must be followed during the installation of the MIQ/PS power supply module. Thus, it is essential to read this component operating manual before carrying out any work with the system. In addition to this manual, the SAFETY chapter of the IQ SENSOR NET system operating manual must be followed.

Always keep this component operating manual together with the system operating manual and all other component operating manuals in the vicinity of the IQ SENSOR NET system.

Special user The MIQ/PS may only be connected to the power supply by a trained electrician.

General safety instructions Safety instructions in this operating manual are identified by the warning symbol (triangle) in the left column. The signal word (e. g. "Caution") indicates the level of danger:

Warning

indicates instructions that must be followed precisely in order to prevent serious dangers to persons.

Caution

indicates instructions that must be followed precisely in order to avoid slight injuries or damage to the instrument or the environment.





Note

indicates notes that draw your attention to special features.

Note

indicates cross-references to other documents, e.g. operating manuals.

2.1 Authorized use

The authorized use of the MIQ/PS consists of its use as a power supply module in the IQ SENSOR NET.

The technical specifications given in chapter 5 TECHNICAL DATA must be observed. Only operation according to the instructions in this component operating manual is authorized.

Any other use is considered to be **unauthorized**. Unauthorized use invalidates any claims with regard to the guarantee.

2.2 General safety instructions

The MIQ/PS is constructed and inspected in accordance with the relevant guidelines and norms for electronic instruments (see chapter 5 TECHNICAL DATA). It left the factory in a safe and secure technical condition.
The failure-free function and operational safety of the MIQ/PS is only guaranteed if the generally applicable safety measures and the special safety instructions in this operating manual are followed during its use.
The failure-free function and operational safety of the MIQ/PS is only guaranteed under the environmental conditions that are specified in chapter 5 TECHNICAL DATA.
If safe operation is no longer possible, the MIQ/PS must be taken out of operation and secured against inadvertent operation.
Safe operation is no longer possible if the MIQ/PS:
•
Safe operation is no longer possible if the MIQ/PS:
 Safe operation is no longer possible if the MIQ/PS: has been damaged during transport has been stored under adverse conditions for a lengthy period of

If you are in any doubt, contact the supplier of your MIQ/PS.

3 Installation

3.1 Scope of delivery

The scope of delivery of the MIQ/PS is listed in the INSTALLATION chapter of the system operating manual.

3.2 Installation in the IQ SENSOR NET

The IQ SENSOR NET provides a number of options for integrating the MIQ/PS mechanically and electrically in the system (stacked mounting, distributed mounting, etc.). The individual types of installation are described in detail in the INSTALLATION chapter of the system operating manual.



Note

To achieve optimum heat transfer, it is recommended to always place the power supply module at the back of a module stack.




Note

If there are several power supply modules in the IQ SENSOR NET, it is helpful if all the power supply modules are connected to a single power supply. As a result, the system can be easily switched on and off from a single location. Cable glands


3.3 Electrical connections: General instructions

All electric cables are fed from below via prepared openings in the enclosure of the MIQ/PS. Cable glands with different clamping ranges are included with the MIQ/PS to provide sealing between the cable and enclosure as well as for strain relief. Select the matching cable gland for the respective cable diameter:

• **Small**, clamping range 4.5 to 10 mm. This cable gland is suitable for all IQ SENSOR NET sensor cables.

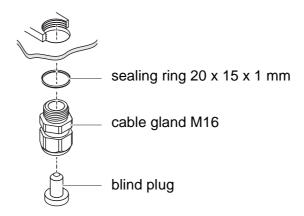

• Large, clamping range 7 to 13 mm. This cable gland is required for cable sheaths with an outside diameter of more than 10 mm and is screwed into the enclosure via an extension piece.

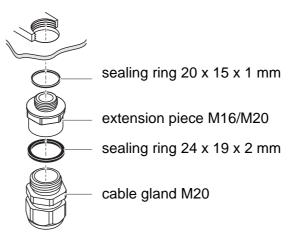



Note

If necessary, you can order more large cable glands in a set of 4 pieces (Model EW/1, Order No. 480 051).

General installation instructions

Observe the following points when attaching connecting wires to the terminal strip

- Shorten all wires to be used to the length required for the installation
- Always fit all the ends of the wires with wire end sleeves before connecting them to the terminal strip
- Any wires that are not used and project into the enclosure must be cut off as closely as possible to the cable gland.
- Screw a small cable gland with sealing ring into each remaining free opening and close it with a blind plug.



Warning

No free wires must be allowed to project into the enclosure. Otherwise, there is a danger that areas safe to contact could come into contact with dangerous voltages which could result in life threatening electric shock when working with the IQ SENSOR NET. Always cut off any wires that are not in use as closely as possible to the cable gland.



3.4 Connecting the power supply

Warning

If the power supply is connected incorrectly, it may represent a danger to life from electric shock. Pay attention to the following points during installation:

- The MIQ/PS may only be connected to the power supply by a trained electrician.
- The connection of the MIQ/PS to the power supply may only be carried out when it is not carrying any voltage.
- The power supply must fulfill the specifications given on the nameplate and in chapter 5 TECHNICAL DATA.
- When installed in a building, a switch or power switch must be provided as a disconnecting device for the MIQ/PS. The interrupt facility must:
 - be installed in the vicinity of the MIQ/PS, easily accessible by the user, and
 - identified as a disconnecting device for the MIQ/PS.
- After it has been installed, the MIQ/PS may only be opened if the mains voltage has been switched off beforehand.
- Wire end sleeves, suitable for the power line, with suitable crimping tool
 - 1 x cable gland, matched to the cable diameter (see section 3.3 on page 3-2).

Tools

- Wire stripper
- Phillips screw driver

Cable stripping knife

• Small screw driver.

Preparing the power line

1	Cut off the cable to the required length.
2	Strip the cable insulation for approx. 45 mm.
3	Bare the wires of phases L and N and fit them with wire end sleeves.
4	If present, cut off the protective earth conductor wire at the end of the cable sheath.

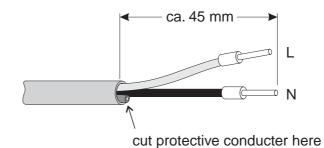


Fig. 3-1 Prepared power cable.

Caution



The protective earth conductor must not project into the housing. Otherwise, malfunctions could occur.

Connecting the power line

5 Open the module.

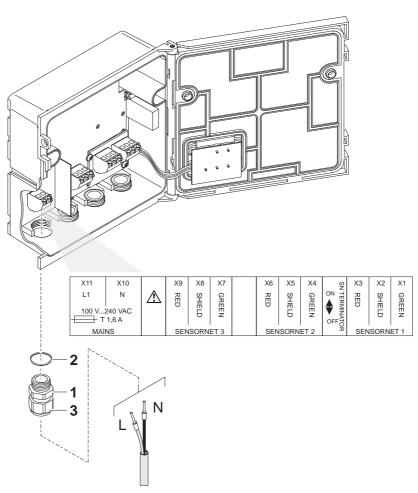


Fig. 3-2 Connecting the power line.

6	Screw the cable gland (pos. 1 in Fig. 3-2) with the sealing ring (pos. 2) into the module housing.
7	Loosen the coupling ring (pos. 3).
8	Feed the power line through the cable gland into the module housing.
9	Connect phases L and N to the terminal strip. Make sure that the cable assignment agrees with the specification on the terminal label under the terminal strip.
10	Tighten the coupling ring (pos. 3).



Warning

No free wires are allowed to project into the housing. Otherwise, there is a danger that safe areas could come into contact with dangerous voltages. This could lead to danger when working with the IQ SENSOR NET. Always cut off any wires that are not in use as closely as possible to the cable gland.

11 Close the module.

4 Maintenance and cleaning

4.1 Maintenance

The MIQ/PS requires no special maintenance. The general maintenance of IQ SENSOR NET components is described in the IQ SENSOR NET system operating manual.

4.2 Cleaning

The cleaning of IQ SENSOR NET components is described in the IQ SENSOR NET system operating manual.



5 Technical data

General technical data on MIQ modules are given in the TECHNICAL DATA chapter of the IQ SENSOR NET system operating manual.

Power supply	Nominal voltage: 100 240 VAC \pm 10 %		
	Frequency:	50/60 Hz in accorda IEC 60038	
	Mains connection2-pole, N and L		
	Line cross-sectio		$1.5 \dots 4.0 \text{ mm}^2$
	Fuse rating on th	e operator : 16 A maxii	
Power consumption	Approx. 25 W		
Output voltage	Max. 24 VDC via the IQ SENSOR NET (for de- tails, see chapter TECHNICAL DATA of the IQ SENSOR NET system operating manual).		
Power output	Max. 18 W		
Protection class	II		
Overvoltage category	II		
Instrument internal fuses	5 x 20 T 1.6 A, w Manufacturer: Type:	rith UL appro Littlefuse Series 218	



Caution

If the original fuse needs to be replaced, it may only be replaced by a fuse of the same type and manufacturer.

/!`

Instrument safety	Applicable norms	 EN 61010-1 UL 3111-1 CAN/CSA C22.2 No 	o. 1010.1
Terminal connections	IQ SENSOR NET connec- tions	3 Additional connectable nator (terminating resis	
	Terminal type	Screw-type terminal st raising the lid	rip, accessible by
	Terminal ranges	A	.2 4.0 mm ² WG 24 12 .2 2.5 mm ²
Cable glands	Suitable for cable diameter	4.5 10 mm and 7.0	13 mm
Λ	Caution Only the line cross-sec	tions specified under	ELECTRICAL DATA.

Only the line cross-sections specified under ELECTRICAL DATA, Seite 1 can be used for the mains connection.

6 Contact Information

6.1 Ordering & Technical Support

<u>Telephone</u> :	(800) 897-4151 (937) 767-7241 Monday through Friday, 8:00 AM to 5:00 PM ET
<u>Fax</u> :	(937) 767-1058
<u>Email</u> :	environmental@ysi.com
<u>Mail</u> :	YSI Incorporated 1725 Brannum Lane Yellow Springs, OH 45387 USA
Internet:	www.ysi.com

When placing an order please have the following information available:

YSI account number (if available)	Name and Phone Number
Model number or brief description	Billing and shipping address
Quantity	Purchase Order or Credit Card

6.2 Service Information

YSI has authorized service centers throughout the United States and Internationally. For the nearest service center information, please visit <u>www.ysi.com</u> and click 'Support' or contact YSI Technical Support directly at 800-897-4151.

When returning a product for service, include the Product Return form with cleaning certification. The form must be completely filled out for an YSI Service Center to accept the instrument for service. The Product Return form may be downloaded at <u>www.ysi.com</u> and clicking on the 'Support' tab.



a **xylem** brand

1725 Brannum Lane Yellow Springs, Ohio 45387 USA +1 937-767-7241 800-765-4974 (US) FAX (937) 767-1058 Email: environmental@ysi.com Internet: www.ysi.com